



AIR FRYER
INSTRUCTION MANUAL



AF-11A

**READ THIS MANUAL THOROUGHLY
BEFORE USING AND SAVE IT FOR FUTURE REFERENCE**

HOUSEHOLD USE ONLY



Shenzhen TidylifeTrading Co., Ltd.
Xingduhaoting, Buji Street, Longgang District, Shenzhen
Facebook Page: www.facebook.com/Tidylifeservice
Website: www.tidylife.cc

MADE IN CHINA



TECHNICAL DATA

Description: 4.3L Air Fryer
Model: AF-11A
Rated Voltage: 220 - 240V 50Hz
Power Consumption: 1500W

Should you encounter problems or require a replacement part, contact the Tidylife Customer Support Team

Your warranty becomes void should you decide to use non Tidylife spare parts.

IMPORTANT SAFEGUARDS

Please read this manual carefully before you use the appliance and save it for future reference.

Danger

- Never immerse the housing, which contains electrical components and the heating elements, in water or rinsing under the tap.
- Avoid any liquid enter the appliance to prevent electric shock or short-circuit.
- Keep all ingredients in the basket or prevent any contact from heating elements.
- Do not cover the air inlet and the air outlet when the appliance is working.
- Fill the pan with oil may cause a fire hazard.
- Don't touch the inside of the appliance while it is operating.

Warning

- Check if the voltage indicated on the appliance fits the local mains voltage.
- Do not use the appliance if there is any damage on plug, mains cord or other parts.
- Do not go to any unauthorized person to replace or fix damaged main cord.
- Keep the mains cord away from hot surfaces.
- Do not plug in the appliance or operate the control panel with wet hands.

- Do not place the appliance against a wall or against other appliances. Leave at least 10cm free space on the back and sides and 10cm free space above the appliance.
- Do not place anything on top of the appliance.
- Do not use the appliance for any other purpose than described in this manual.
- Do not let the appliance operate unattended.
- During hot air frying, hot steam is released through the air outlet openings, Keep your hands and face at a safe distance from the steam and from the air outlet openings. Also be careful of hot steam and air when you remove the pan from the appliance.
- Any accessible surfaces may become hot during use .
- Immediately unplug the appliance if you see dark smoke coming out of the appliance. Wait for the smoke emission to stop before you remove the pan from the appliance.

Caution

- Ensure the appliance is placed on a horizontal, even and stable surface.
- This appliance is designed for household use only. It may not suitable to be safely used in environments such as staff kitchens, farms, motels, and other non-residential environments. Nor is it intended to be used by clients in hotels, motels, bed and breakfasts and other residential environments.
- If the appliance is used improperly or for professional or semi-professional purposes or if it is not used improperly or for professional or semi-professional purposes or it is not used according to the instructions in the user manual, the guarantee becomes invalid and we could refuse any liability for damage caused.
- Always unplug the appliance while not using.
- The appliance needs approximately 30 minutes to cool down for handle or cleaning safely.

INTRODUCTION


Thank you for purchasing this Air Fryer from the products. Please read this Manual carefully BEFORE using the Air Fryer for your own safety. It has been designed to provide many years of trouble-free

use. There are many benefits to using a Air Fryer:

- Simple to use controls for cooking quick, healthy meals.
- Generous 4.3L frying capacity to cook for an army.

- Rapid air circulation system to cook food fast and saves energy.
- Healthy alternative to cooking deep fried food with no oil.
- Air Fried food retains its nutritional value, but still has the taste of delicious fried food.

GENERAL DESCRIPTION (FIG.1)

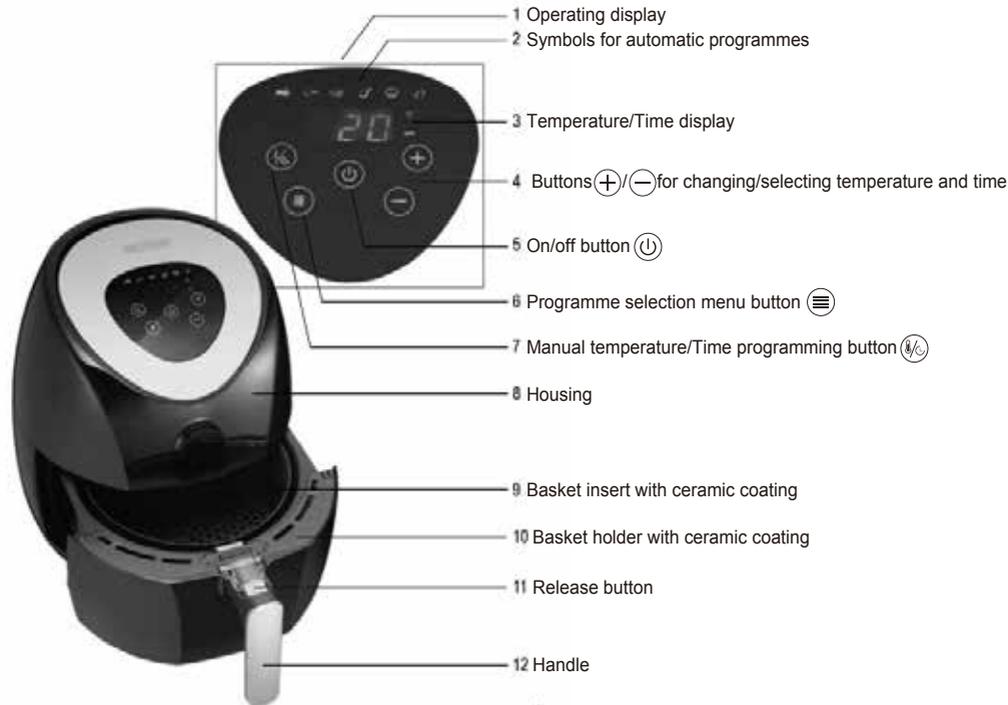

BEFORE FIRST USE

1. Remove all packaging materials
2. Remove any stickers or labels from the appliance
3. Thoroughly clean the basket and pan with hot water, some washing-up liquid and a non-abrasive sponge.

Note: You can also clean these parts in the dishwasher.

4. Wipe inside and outside of the appliance with a moist cloth.

This is an oil-free fryer that works on hot air, Do not fill the pan with oil or frying fat.

PREPARING FOR USE

- 1 Place the appliance on a stable, horizontal and even surface.

Do not place the appliance on non-heat-resistant surface.

- 2 Place the basket in the pan

- 3 Pull the cord from the storage compartment which locates on the bottom of the appliance.

Do not fill the pan with oil or any other liquid.

Do not put anything on top of the appliance, the airflow will be disrupted and affects the hot air frying result.

USING THE APPLIANCE

The oil-free can prepare a large range of ingredients. The recipe booklet included helps you get to know the appliance.

Hot air frying

1. Connect the mains plug into an earthed wall socket.
2. Carefully pull the pan out of the Hot-air fryer
3. Slide the pan back into the Hot-air fryer

Noting to carefully align with the guides in the body of the fryer.

Never use the pan without the basket in it.

Caution: Do not touch the pan during and some time after use, as it gets very hot. Only hold the pan by the handle.

4. Determine the required preparation time for the ingredient

Using automatic programmes

1. Press the  key for 2 seconds to turn the fryer on. To switch off, press it again for 2 seconds

2. Proceed as described and tap the  key.

---The first automatic programme shows on the display.

3. Keep tapping the menu key  until the desired programme is shown. Temperature and time alternate in the display.

4. Tap the  key.

---The food is now being cooked. The display changes between temperature and remaining running time. Audible beeps indicate that the pre-set processing time has elapsed.

Hint!

To adjust the temperature and time settings individually, press the  key once or twice, and then use the  /  keys to set the time resp. Temperature.

5. Use the handle to remove the basket holder from the fryer.
6. Transfer the cooked food into a heatresistant container.
7. Allow the basket holder and basket sufficient time to cool down.
8. Remove the plug from the wall socket.

Using the manual temperature/time selection

1. Press the  key for 2 seconds to turn the fryer on. To switch off, press it again for 2 seconds
2. Proceed as described under preparing the unit and tap the  key, and then use the  /  keys to set the minutes.
3. Tap the  key and use the  /  keys to select the temperature.
4. Tap the  key. The display alternates between temperature and remaining running time.

--The food is now being cooked, audible beeps indicate that the pre-set processing time has elapsed.

1. Use the handle to remove the basket holder from the air fryer.
2. Transfer the cooked food into a heat-resistant container.
3. Allow the basket holder and basket sufficient time to cool down.
4. Remove the plug from the wall socket.
5. Check if the ingredients are ready.

If the ingredients are not ready yet, simply slide the pan back into the appliance and set the timer to a few extra minutes.

6. To remove ingredients (e.g. fries), pull the pan out of the Hot-air fryer and place it on a flat surface, and press the basket release button and lift the basket out of the pan.

Do not turn the basket upside down with the pan still attached to it, as any excess oil that has collected on the bottom of the pan will leak onto the ingredients.

the pan and the ingredients are hot and hot fryer. Depending on the type of the ingredients in the fryer, steam may escape from the pan.

7. Empty the basket into a bowl or onto a plate.

Tip: To remove large or fragile ingredients, lift the ingredients out of the basket by a pair of tongs

8. When a batch of ingredients is ready, the Hot-air fryer is instantly ready for preparing another batch.

SETTINGS

This table below will help you to select the basic settings for the ingredients.

Note: Keep in mind that these settings are indications. As ingredients differ in origin, size, shape as well as brand, we cannot guarantee the best setting for your ingredients. Because the Rapid Air technology instantly reheats the air inside the appliance instantly Pull the pan briefly out of the appliance during hot air frying barely disturbs the process.

Tips

- Smaller ingredients usually require a slightly shorter preparation time than larger ingredients.
- A larger amount of ingredients only requires a slightly longer preparation time, a smaller amount of ingredients only requires a slightly shorter preparation time.
- Shaking smaller ingredients halfway through the preparation time optimizes the end result and can help prevent unevenly fried ingredients.
- Add some oil to fresh potatoes for a crispy result. Fry your ingredients in the Hot-air fryer within a few minutes after you added the oil.
- Do not prepare extremely greasy ingredients such as sausages in the Hot-air fryer.
- Snacks that can be prepared in an oven can also be prepared in the Hot-air fryer
- The optimal amount for preparing crispy fries is 500 grams.
- Use pre-made dough to prepare filled snacks quickly and easily. Pre-made dough also requires a shorter preparation time than home-made dough.
- Place a baking tin or oven dish in the Hot-air fryer basket if you want to bake a cake or quiche or if you want to fry fragile ingredients or filled ingredients
- You can also use the Hot-air fryer to reheat ingredients. To reheat ingredients, set the temperature to 150 °C for up to 10 minutes.

	Min-max Amount (g)	Time (min.)	Temperature (°C)	Shake	Extra information
Potato & fries					
Thin frozen fries	300-400	18-20	200	shake	
Thick frozen fries	300-400	20-25	200	shake	
Potato gratin	500	20-25	200	shake	
Meat & Poultry					
Steak	100-500	10-15	180		
Pork chops	100-500	10-15	180		
Hamburger	100-500	10-15	180		
Sausage roll	100-500	13-15	200		
Drumsticks	100-500	25-30	180		

Chicken breast	100-500				
Snacks	300-400	18-20	200		
Spring rolls	300-400	20-25	200	shake	Use oven-ready
Frozen chicken nuggets	100-500	6-10	200	shake	Use oven-ready
Frozen fish fingers	100-400				Use oven-ready
Frozen bread crumbed cheese snacks	100-400	8-10	180		Use oven-ready
Stuffed vegetables	100-400	10-15	180		
Baking		10-15	180		
Cake	300	13-15	200		Use baking tin
Quiche	400	25-30	180		Use baking tin/oven dish
Muffins	300				Use baking tin
Sweet snacks	400				Use baking tin/oven dish

Note: Add 3 minutes to the preparation time when you start frying while the Hot-air fryer is still cold.

CLEANING

Clean the appliance after every use.

The pan and the non-stick coating basket. Do not use metal kitchen utensils or abrasive cleaning materials to clean them, as this may damage the non-stick coating.

1 Remove the mains plug from the wall socket and let the appliance cool down.

Note: Remove the pan to let the Hot-air fryer cool down more quickly.

2 Wipe the outside of the appliance with a moist cloth.

3 Clean the pan, separator and basket with hot water, some washing-up liquid and a non-abrasive sponge.

You can use degreasing liquid to remove any remaining dirt.

Note: The pan and basket are dishwasher-proof.

Tip: If dirt is stuck to the basket or the bottom of the pan, fill the pan with hot water with some washing-up liquid. Put the basket in the pan and let the pan and the basket soak for approximately 10 minutes.

4 Clean the inside of the appliance with hot water and non-abrasive sponge.

5 Clean the heating element with a cleaning brush to remove any food residues.

STORAGE

1 Unplug the appliance and let it cool down.

2 Make sure all parts are clean and dry.

TROUBLESHOOTING

problem	Possible cause	Solution
The Hot-air fryer does not work	The appliance is not plugged in.	Put the mains plug in an earthed wall socket.
	The appliance is not plugged in.	Turn the timer knob to the required preparation time to switch on the appliance.
The ingredients fried with the air fryer are not done.	The amount of ingredients in the basket is too big.	Put smaller batches of ingredients in the basket. Smaller batches are fried more evenly.
	The set temperature is too low.	Turn the temperature control knob to the required temperature setting (see section 'settings' in chapter 'Using the appliance').
	The preparation time is too short.	Turn the timer knob to the required preparation time (see section 'Settings' in chapter 'Using the appliance').
The ingredients are fried unevenly in the air fryer.	Certain types of ingredients need to be shaken halfway through the preparation time.	Ingredients that lie on top of or across each other (e.g. fries) need to be shaken halfway through the preparation time. See section 'Settings' in chapter 'Using the appliance'.
Fried snacks are not crispy when they come out of the air fryer.	You used a type of snacks meant to be prepared in a traditional deep fryer.	Use oven snacks or lightly brush some oil onto the snacks for a crispier result.
I cannot slide the pan into the appliance properly.	There are too much ingredients in the basket.	Do not fill the basket beyond the MAX indication.
	The basket is not placed in the pan correctly.	Push the basket down into the pan until you hear a click.
White smoke comes out of the appliance.	You are preparing greasy ingredients.	When you fry greasy ingredients in the air fryer, a large amount of oil will leak into the pan. The oil produces white smoke and the pan may heat up more than usual. This does not affect the appliance or the end result.
	The pan still contains grease residues from previous use.	White smoke is caused by grease heating up in the pan. make sure you clean the pan properly after each use.

Fresh fries are fried unevenly in the air fryer.	You did not use the right potato type.	Use fresh potatoes and make sure they stay firm during frying.
	You did not rinse the potato sticks properly before you fried them.	Rinse the potato sticks properly to remove starch from the outside of the sticks.
Fresh fries are not crispy when they come out of the air fryer.	The crispiness of the fries depends on the amount of oil and water in the fries.	Make sure you dry the potato sticks properly before you add the oil.
		Cut the potato sticks smaller for a crispier result.
		Add slightly more oil for a crispier result.

	<p>This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.</p>
--	---

WARRANTY INFORMATION

The manufacturer provides warranty in accordance with the legislation of the customer's own country of residence, with a minimum of 18 months , starting from the date on which the appliance is sold to the end user.

The warranty only covers defects in material or workmanship.

The warranty will not apply in cases of:

- Normal wear and tear
- Incorrect use, e.g. overloading of the appliance, use of non-approved accessories
- Use of force, damage caused by external influences
- Damage caused by non-observance of the user manual, e.g. connection to an unsuitable mains supply or non-compliance with the installation instructions
- Partially or completely dismantled appliances.